


HIP | HOWARD INDUSTRIES POLYFRAME SYSTEM

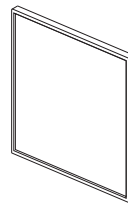

GLASS MOUNT INSTALLATION INSTRUCTIONS

1

Using a tape measure and wax pencil, mark the intended location on the glass. If applicable, refer to ADA installation requirements.

2

On the back side of the sign are (4) adhesive mounting squares. Remove the liner to expose the adhesive.

3


Using a level, align the sign to the marks from step 1. Press firmly for maximum adhesion.

For more product information, installation tips, and quality signage merchandise, go to

6400 Howard Drive • Fairview, PA • 16415 • (814) 833-7000 • Toll Free 800.458.0591

www.howardindustries.com

HIP | HOWARD INDUSTRIES POLYFRAME SYSTEM

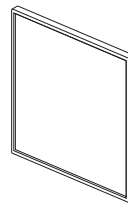

NEW PANEL INSTALLATION

1

In the existing frame, place the appropriate number of Pop Locks. (Typical quantity is 4).
Peel away the liners to reveal the adhesive.

2

Align the sign panel to the frame and gently push to adhere.

3

Sign Face
Pop Lock
Sign Frame

For more product information, installation tips, and quality signage merchandise, go to

6400 Howard Drive • Fairview, PA • 16415 • (814) 833-7000 • Toll Free 800.458.0591

www.howardindustries.com