


NEW PANEL INSTALLATION


1

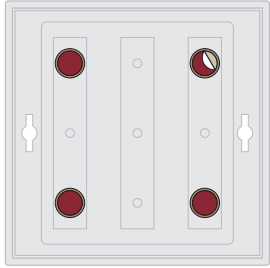

In the existing frame, place the appropriate number of Pop Locks. (Typical quantity is 4).



Peel away the liners to reveal the adhesive.

2

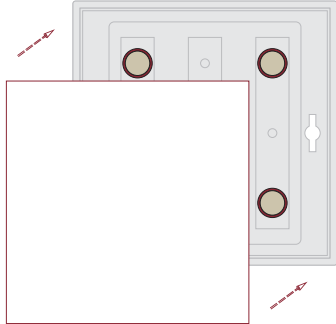

Align the sign panel to the frame and gently push to adhere.

3

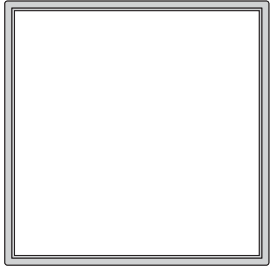

Sign Face
Pop Lock
Sign Frame

For more product information, installation tips, and quality signage merchandise, go to