



# PATIENT FOCUSED

## KEYHOLE INSTALLATION INSTRUCTIONS




### 1 MOUNTING TEMPLATE

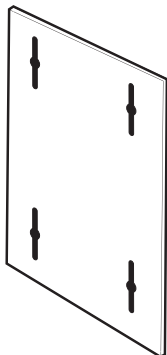


Using a level, align the provided installation template to the intended location. If applicable, refer to ADA installation requirements.

### 2

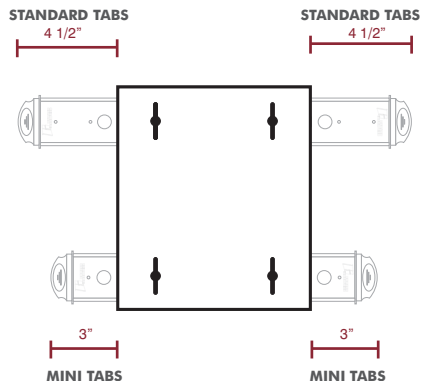


Ensure that there is clearance on either side of template to allow tabs to slide unobstructed. (4-1/2" for Standard Tabs, 3" for Mini Tabs).

### 3

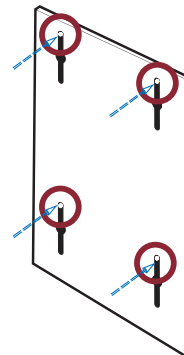

Use a writing utensil to mark the TOP EDGE of each slot.


### 4

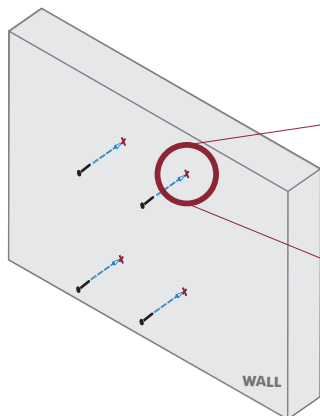

Using the marks from step 3, install appropriate hardware (screw anchors may be required). **Screws must be no larger than #6 and are not provided.**


### 5

#### CAUTION:

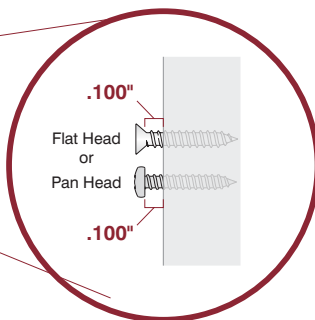


**When installing the mounting screws, ensure to leave .100" of clearance** to allow the sign to slide firmly into place.

### 6

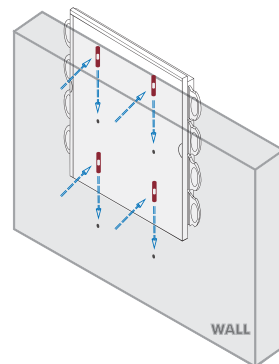

Affix sign to wall by aligning keyholes over screws and sliding down into place.

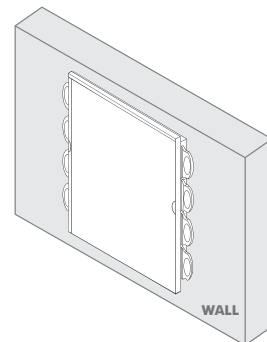

For more product information, installation tips, and quality signage merchandise, go to