

PATIENT FOCUSED GLASS MOUNT INSTALLATION INSTRUCTIONS






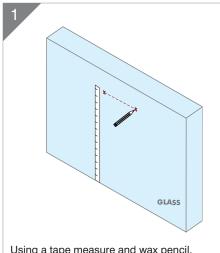



Using a tape measure and wax pencil, mark the intended location on the glass. If applicable, refer to ADA installation requirements.

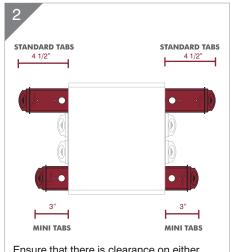

Ensure that there is clearance on either side of sign to allow tabs to slide unobstructed. (4-1/2" for Standard Tabs, 3" for Mini Tabs).

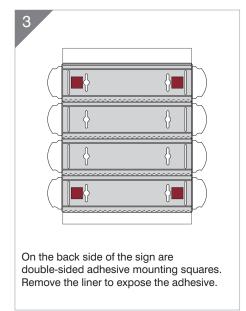

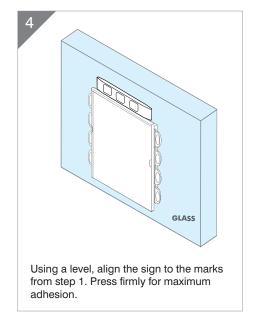

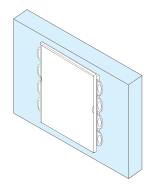

For more product information, installation tips, and quality signage merchandise, go to