


# PATIENT FOCUSED GLASS MOUNT INSTALLATION INSTRUCTIONS



**1**

Using a tape measure and wax pencil, mark the intended location on the glass. If applicable, refer to ADA installation requirements.

**2**

STANDARD TABS 4 1/2"  
STANDARD TABS 4 1/2"  
MINI TABS 3"  
MINI TABS 3"


Ensure that there is clearance on either side of sign to allow tabs to slide unobstructed. (4-1/2" for Standard Tabs, 3" for Mini Tabs).

**3**

On the back side of the sign are (8) adhesive mounting squares. Remove the liner to expose the adhesive.

**4**

Using a level, align the sign to the marks from step 1. Press firmly for maximum adhesion.

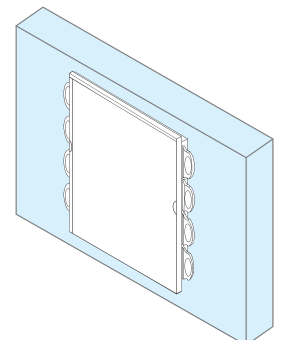

For more product information, installation tips, and quality signage merchandise, go to