


PATIENT FOCUSED

KEYHOLE INSTALLATION INSTRUCTIONS



1 MOUNTING TEMPLATE

Using a level, align the provided installation template to the intended location. If applicable, refer to ADA installation requirements.

2

STANDARD TABS 4 1/2" **STANDARD TABS** 4 1/2"

MINI TABS 3" **MINI TABS** 3"

Ensure that there is clearance on either side of template to allow tabs to slide unobstructed. (4-1/2" for Standard Tabs, 3" for Mini Tabs).

3

Use a writing utensil to mark the TOP EDGE of each slot.

4

Using the marks from step 3, install appropriate hardware (screw anchors may be required). **Screws must be no larger than #6 and are not provided.**


5 CAUTION:

.100"
Flat Head or Pan Head
.100"

When installing the mounting screws, ensure to leave .100" of clearance to allow the sign to slide firmly into place.

6

Affix sign to wall by aligning keyholes over screws and sliding down into place.

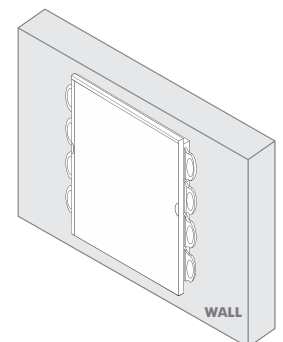

For more product information, installation tips, and quality signage merchandise, go to