




# Installation Instructions

## Angled Base

### MOUNTING HARDWARE

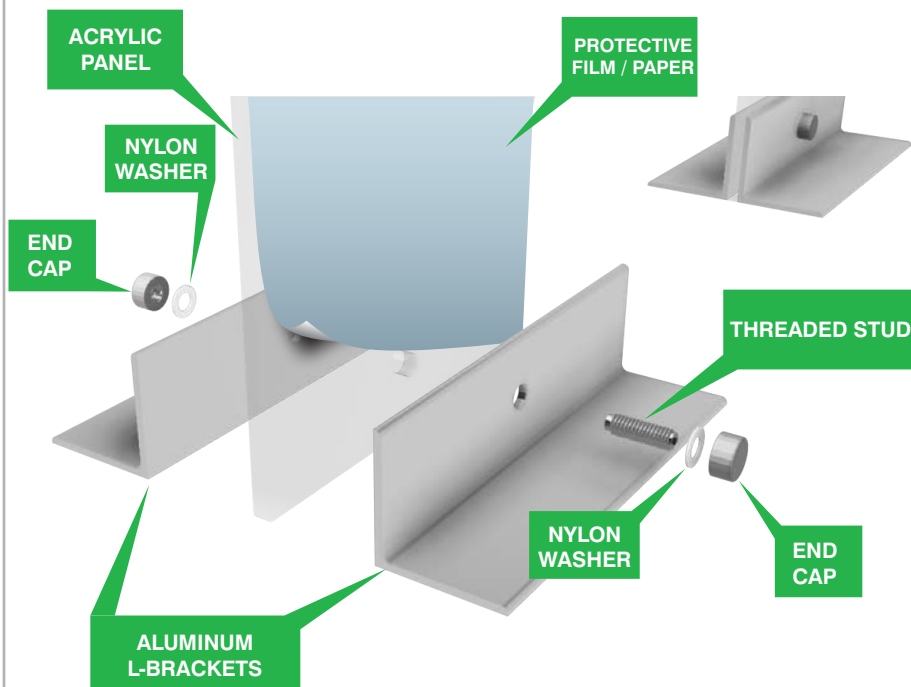

**MORE  
DESIGNS  
AVAILABLE**



### INSTALLATION INSTRUCTIONS

- 1 Remove first 4 inches of **protective film/paper** to access and assemble hardware.
- 2 Thread **stud** all the way into **end cap**.
- 3 Slide **nylon washer** over **threaded stud**.
- 4 Place the **acrylic panel** between both **aluminum L-brackets**.
- 5 Insert the **threaded stud** into the pre-drilled hole and apply the other **nylon washer** and **end cap**.
- 6 Repeat for other bracket.
- 7 Completely remove remaining **protective film/paper**.

### OPTIONAL MOUNTING METHODS

- 1 Drill holes into **aluminum L-brackets** and attach to surface with proper hardware (NOT INCLUDED).
- 2 Attach double sided VHB tape (NOT INCLUDED) to bottom of **aluminum L-brackets** and attach to surface.

**\* HANDLE WITH CARE, AS TO NOT SCRATCH ACRYLIC SURFACE.**



# MAINTENANCE CARE

*To Maintain Peak Quality of Your Shield*



Clean shield surfaces with an approved cleaner. Approved house-hold cleaners and disinfectants include:  
Bleach: 1/3 cup per gallon of water to dilute  
Isopropyl alcohol: wipes or sprays containing at least 70%  
Hydrogen peroxide: 3-5% (do not dilute)  
Warm soapy water: gentle dish soap with clean water rinse



Spray cleaner on clean soft cloth or clean microfiber cloth.  
**DO NOT** apply cleaner directly on signage!



Apply light pressure to acrylic as to not scratch surface.

Our SGuards offer cast acrylic that provides the highest clarity and UV stability for interior and exterior use. Our SGuards are also easy to clean and offer superior craze and chemical resistance.



For more product details, installation tips, and quality signage merchandise, visit:

[howardindustries.com](http://howardindustries.com)  
800-458-0591